

FOR TRUCKS AND TRAILERS



Gates

Gates are becoming a more important part of the transport industry and with regulations changing all the time and some mine sites enforcing truckies to have gates on their truck or trailer before they can enter their sites.



Gate Weights

Length	Height	Weight
1800mm	1200mm	14 Kg
2200mm	1200mm	16 Kg
1800mm	1500mm	16.4 Kg
2200mm	1500mm	21.5 Kg
1800mm	1800mm	20.4 Kg
2200mm	1800mm	24 Kg

Frame sizes are 25 x 25 x 1.6 Galvanised tube

Uprights are 20 x 20 x 1.6 Galvanised tube

Safety Priorities - It is your responsibility to make sure that you are informed of government regulations and that everything is secured to your truck or trailer.

Load racks

Load racks at the front & rear are necessary on most trailers carrying general freight as they can help stop the freight moving. They can be supplied in 2 classes from light weight up to heavy duty. Light weight load racks can be fitted with flat inserts inside the bottom 250mm to help stop them cracking or bending at the bottom.



Load Rack Weights

Heavy Duty

	Height	Weight	Frame	C/Bars
Light Weight	ht Weight 1500mm 35.7Kg		2mm	2mm
Heavy Duty	1500mm	45.6Kg	3.2mm	2mm
	Height	Weight	Frame	C/Bars
Liaht Weiaht	1800mm	41.5Ka	2mm	2mm

53Kg

1800mm

Load racks & gates are kept in stock for most makes of trailers or if not in stock can be made to order in a short time.

3.2mm

2mm

DIY Gates

Different size gates are kept in stock with no pins attached. You can purchase the gates to suit your size truck & weld the pins on to suit the holes in the tray. Pins & catches can be supplied as well as different types of gate pockets to suit the tray. You will need to know what type of combing the tray has.



The combing is the steel beam running along the edge of the tray. It may be a channel, RSJ /eyebeam, or a flat bar combing. If it is a flat bar combing, we need to know the overall width of the tray to determine if the gate pockets can go on the outside or have to go on the inside under the floor.

The maximum width including the gate pockets is 2500mm. Fittings available: Banana Catches, Corner Pins, Corner Chains and Gate Pockets & Pins. See Accessories.















0400 300 827

35 Robert Street, Henley Brook 6055 Western Australia Email info@aaaimports.com.au Web: aaaimports.com.au

Gates

FOR TRUCKS AND TRAILERS



Mine-Site Safety Gates

Mine-site safety gates on trucks and trailers are now required on most mine sites if you do not have any gates fitted.

There are no standards regarding these gates or how they should be fitted, but some mine sites have their own standards so you would need to check with the mine site that you are transporting to.



The reason for the mine-site safety gates are that they are much lighter and easy to handle, are painted yellow and are only waist high, making it easy to load or unload and provides a barrier to prevent handlers from falling from the Tray.

Access Ladders

The access ladder fits onto the rear of any semi-trailer as long as it has the holes for a rear load rack. The access ladder is incorporated into the load rack which is 900mm high. When not being used the ladder folds up out of the way.




Tracks and Roller Kits

Roller kits and tracks can be supplied only or supplied and fitted. Rollers can be supplied for most tautliner tracks.



	Туре	Wheel Dia	Wheel Width	Profile	Code	Cost
-	А	35mm	27.5mm	Tapered	Α	\$22.00
	В	32mm	23.5mm	Square	В	\$22.00
	В	30mm	32mm	Square	B-30	\$22.00
	C	37mm	30mm	Square	C	\$22.00
	D	37mm	34mm	Round	D	\$22.00
	Krueger	34mm	32mm	Round	K	\$25.00
	Vawdry	34mm	35mm	Round	V	\$29.00
	Freighter	44.5mm	10mm	Round	F	\$36.00

All Prices include GST Rollers Freighter rollers will fit most Freighter trailers & some other trailers. Aluminium tracks are available in

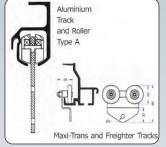







В





All Prices

Krueger

7m lengths @ \$195.00/length inc GST. Roller type A fits this track.


B30

Vawdry Freighter

Gate Accessories

Whatever you have, be it called a Flatbed, Traytop, Tauntliner, Curtain Sider, 8 Tonner, Semi-Trailer, B-double, Roadtrain, Pig Trailer or Dog Trailer, we will have gates in stock that will fit.


You just need to pick them up and weld the pins on to suit the holes in the tray, or cut your own holes and away you go.



Pockets and Pins



Corner Pin



include GST









Gate Pocket Type 1

Gate Pocket Type 2

Banana Catch